


BINMASTER[®]

External Airpad Mounting Kit

EXTERNAL MOUNTING INSTRUCTIONS

The BinMaster Airpad Mounting Kit eliminates the need to enter the bin to install or service air pads. By cutting a 2-5/8" x 6-3/8" hole in the bin wall, the airpad may be inserted and removed from outside the bin. First attach the mounting kit to the airpad as shown. Then insert the air pad/mounting kit assembly through the opening and lock into place with the spring steel clamp. This kit may be used for flat-walled bins or round bins with at least a 3 foot diameter. For smaller diameters, additional gaskets may be necessary.

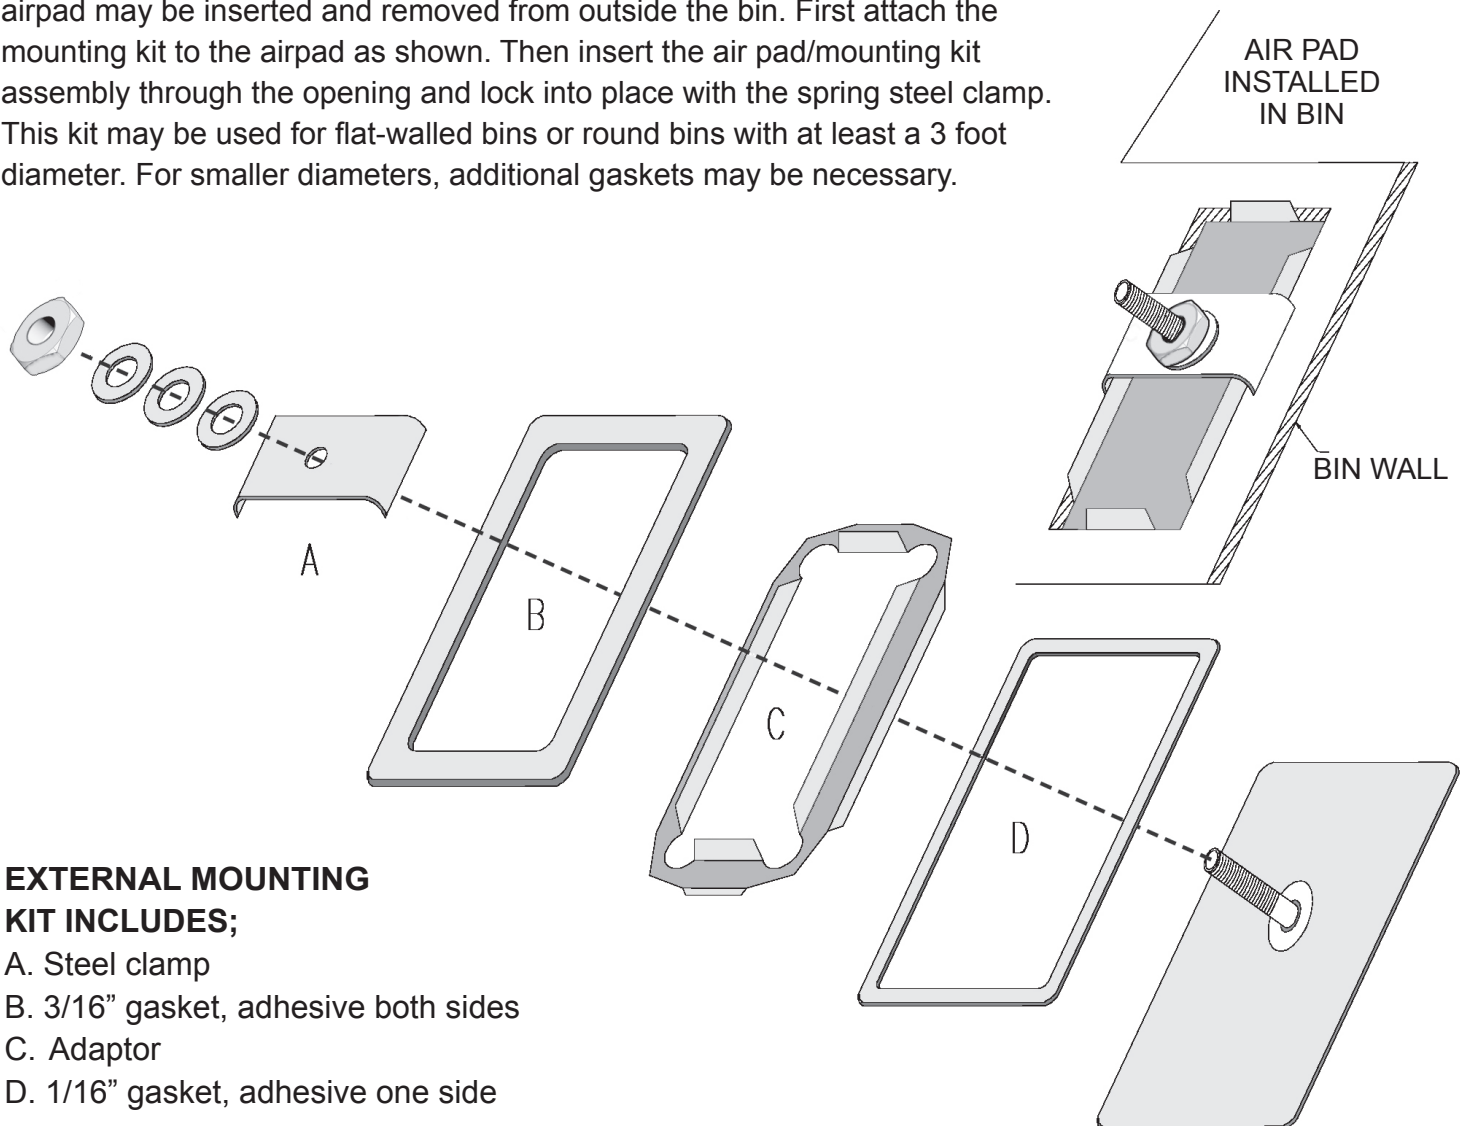

EXTERNAL MOUNTING KIT INCLUDES;

- A. Steel clamp
- B. 3/16" gasket, adhesive both sides
- C. Adaptor
- D. 1/16" gasket, adhesive one side

9270135 REV. A

Division of Garner Ind. • 7201 N. 98th St. • Lincoln, NE 68507 • 402.434.9102 • FAX 402.434.9133




2 rue René Laennec 51500 Taissy France
Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

E-mail: hvssystem@hvssystem.com
Site web : www.hvssystem.com

BINMASTER®

Internal Airpad Mounting Kit

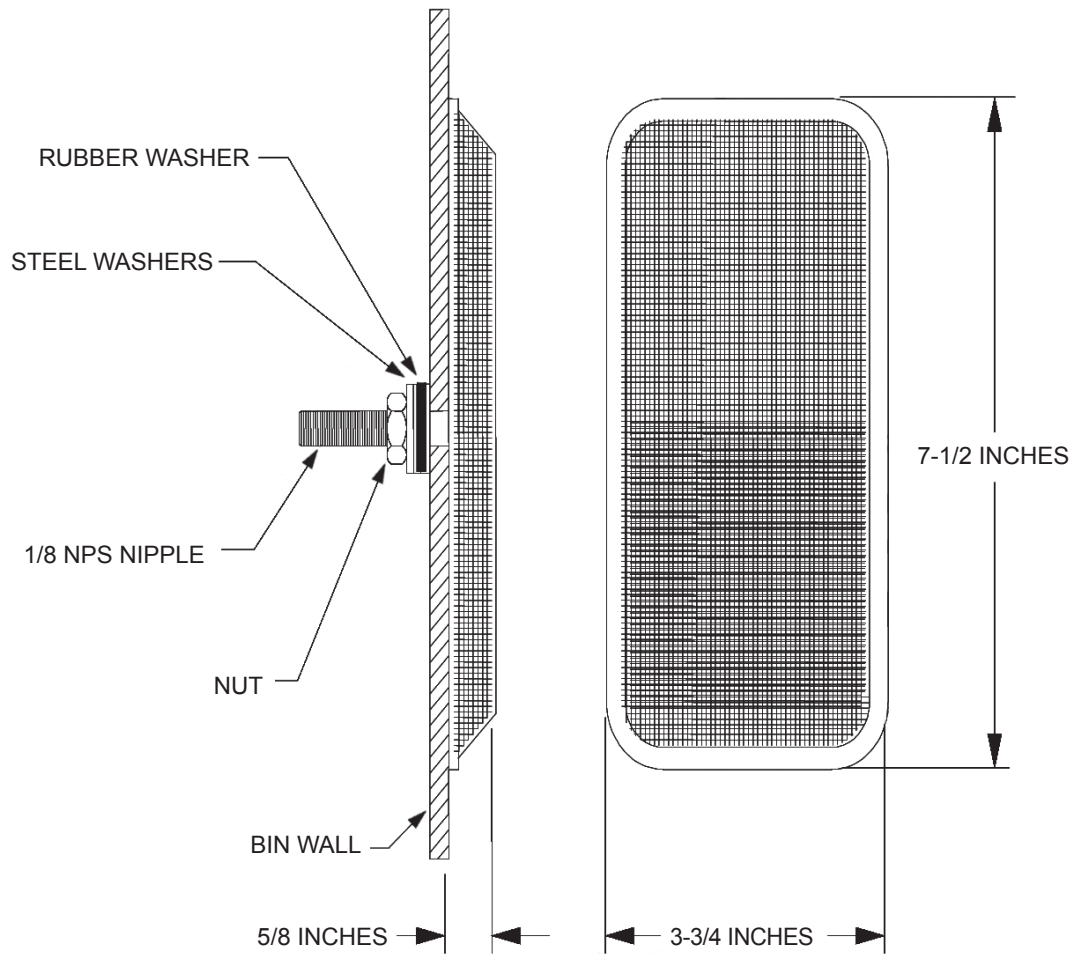

INTERNAL MOUNTING INSTRUCTIONS

Drill 7/16" hole through bin wall and insert special tank nipple through the hole. Attach Airpad and lock into place with the locknut and rubber washer.

9270135 REV. A